

## Ecoegg™ Dryer Eggs Direction for use



Ecoegg™ dryer eggs will save you time, money and energy whenever you use your dryer. With the Ecoegg™ dryer eggs, there is no need for fabric conditioner/softener as they soften your clothes naturally, whilst also leaving them with a subtle fragrance. You can also eliminate the use of dryer sheets.

### Fragrance sticks

The Ecoegg dryer eggs come supplied with fragrance sticks which fit inside and gently fragrance your laundry whilst it's drying. The fragrance sticks will need replacing from time to time and refills are widely available. To reduce drying time without fragrancing, the Ecoegg dryer eggs can be used without fragrance sticks if you wish. They will continue to speed up your drying time and naturally soften your clothes, you just won't get the benefit of the fragrancing.

### Instructions for use

Place the Ecoegg™ dryer eggs into the drum of your dryer along with your laundry.

Dry your laundry on the usual setting, observing all garment care instructions as you usually would.

Once your laundry has finished drying, you do not need to remove the dryer eggs from the dryer, you can leave them in the dryer until next time, if you wish.

### How to replace the fragrance sticks: step-by-step



1. Push the fragrance stick (white cap end first) into the bottom (wider part) of the dryer egg.



2. Push the fragrance stick all the way up inside the dryer egg. It will slip into place.



3. If there is already a fragrance stick inside the dryer egg, it will be pushed out of the top of the dryer egg. Dispose of this safely.



4. If required, gently push the bottom of the new fragrance stick to ensure it is sitting firmly in place inside the egg.



5. Ensure the fragrance stick is in place correctly – it should look like this at the bottom of the dryer egg. It should be loose inside the egg, not held tightly in place.



6. It should look like this at the top of the dryer egg, the cap end of the fragrance stick at the top, with a clear gap between outer case of the dryer egg and the fragrance stick. It should be loose inside the egg, not held tightly in place.

If you have any questions please get in touch with our friendly customer services team who are waiting to take your call

**Telephone: 01622 535200 or Email: [customerservices@ecoegg.com](mailto:customerservices@ecoegg.com)**

# Frequently Asked Questions

## **How do the ecoegg dryer eggs work?**

The Ecoegg™ dryer eggs have three functions:

### *1. Speed up the drying time*

Without Ecoegg™ dryer eggs, clothes can clump together in the drum leaving a lot of unused space. The Ecoegg™ dryer eggs lift and separate the clothes in the drum, making use of all the available space. This means that the clothes dry faster.

### *2. Soften your clothes*

The nodules on the Ecoegg™ dryer eggs are specially designed to gently lift the fibres and breakdown the stiffness created by washing, softening your clothes naturally without any chemicals.

### *3. Fragrance your laundry*

The heat of your tumble dryer activates the Ecoegg™ fragrance sticks to gently infuse their delicate scent into your clothes, without any harsh chemicals.

## **How are the ecoegg dryer eggs environmentally friendly?**

The Ecoegg™ dryer eggs reduce the amount of time it takes to dry your laundry. Therefore you are using less energy and produce less carbon emissions.

## **Do I have to use both of the ecoegg dryer eggs at the same time?**

Yes. The Ecoegg™ dryer eggs work together to lift and separate your clothes in the tumble dryer. You need them both in the dryer at the same time for them to work.

## **Are the ecoegg dryer eggs suitable for all fabrics?**

Yes, apart from very delicate items. Please do not use the ecoegg dryer eggs with very delicate clothing.

## **Is there a maximum drying temperature?**

The Ecoegg™ dryer eggs can be used up to 90 degrees. Most tumble driers operate at well below this temperature.

## **Can I use tumble dryer sheets with the ecoegg dryer eggs?**

You can, but it's not necessary.

## **How will my clothes smell?**

You clothes will be left with a delicate hint of your chosen fragrance.

## **How will I know when to replace the fragrance stick?**

The fragrance sticks last for approximately twenty dries/uses each. However, this will vary depending on the temperature of your dryer, the length of the drying time etc. When the fragrance sticks lose their scent, it's time to replace them.

## **Are the fragrance sticks harmful to your skin?**

No. The fragrance sticks are non-toxic, hypoallergenic and contain no harsh chemicals. They are suitable for even the most sensitive of skin.

## **Do I have to use a fragrance stick in each of the ecoegg dryer eggs?**

No. If you prefer a more subtle fragrance, you can put a fragrance stick into just one of the Ecoegg™ dryer eggs.

## **How do I dispose of the fragrance stick?**

Please dispose of the fragrance sticks in the general household waste.

## **If I have a combined washer / dryer can the Ecoegg™ dryer eggs be put through the wash cycle?**

No. The Ecoegg™ dryer eggs should not be used in the wash cycle.

## **Where can I buy fragrance stick refills?**

You can purchase refills from the same place you purchased your ecoegg dryer eggs originally.

## **Caution**

The dryer eggs become hot during use. Please take care when removing them from the dryer and allow them to cool before handling them.